

We are so happy you chose a  
hama product.

***Enjoy using it!***


***hama***



00  
220818

# Quick Installation Guide

## Required tools

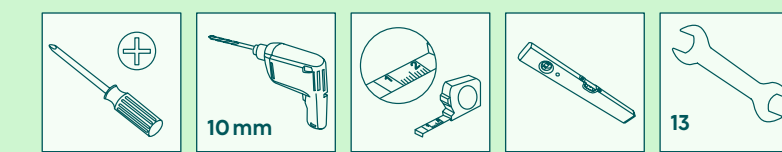

## Installation kit

<b>A1</b>		8x70 (x6)	<b>D1</b>		M8x12 (x4)
<b>A2</b>		Ø10x60 (x6)	<b>D2</b>		M8x20 (x4)
<b>A3</b>		M8 (x6)	<b>D3</b>		M8x30 (x4)
<b>B1</b>		M6 (x4)	<b>D4</b>		M8x50 (x4)
<b>B2</b>		Ø8x10 (x4)	<b>F1</b>		(x4)
<b>B3</b>		Ø8x20 (x4)	<b>F2</b>		(x2)
<b>C1</b>		M6x12 (x4)	<b>F3</b>		(x1)
<b>C2</b>		M6x20 (x4)	<b>F4</b>		(x1)

### 1 Prepare the bracket

**F2**

### 2 Drilling the holes

**F3**

**F4**

70mm

Ø10mm

### 3 Wall mounting the bracket

**A2**

**A1**

### 4 Mounting on backside of the TV

**B1**

**B2, B3**

**A3**

**A1**

### 5 Adjustment & Fixing

**C1, C2, D1, D2, D3, D4**

**F1**

**B1**

**B2, B3**

### 6 Adjustment & Fixing

**C1, C2, D1, D2, D3, D4**

**F1**

**B1**

**B2**

**B3**

**F1**

**D3, D4**

**B3**

★ You do not need a washer for the D-screws

M8x50 + Ø8x5 = M8x45 (D4)

### 7 Adjustment & Fixing

Wall / Wand

### 8 Adjustment & Fixing

Wall / Wand

### 9 Do you need more help?

Do you need more help?

### 10 Do you need more help?

Do you need more help?

Scan QR or visit: [support.hama.com/00220818](http://support.hama.com/00220818)

21 PAP Raccolta Carta